

IMPORTANT FITTING NOTICE

PLEASE READ BEFORE FITMENT

Ford Transit Applications

Vehicles requiring this starter are fitted with a starter relay, the relay and the terminals connected to it are prone to corrosion.

The effect of which is to make the starter just click, work intermittently or even completely fail.

The relay and its connections must be checked, cleaned\replaced after fitting this starter.

The relay is located behind and below the driver's side headlight